

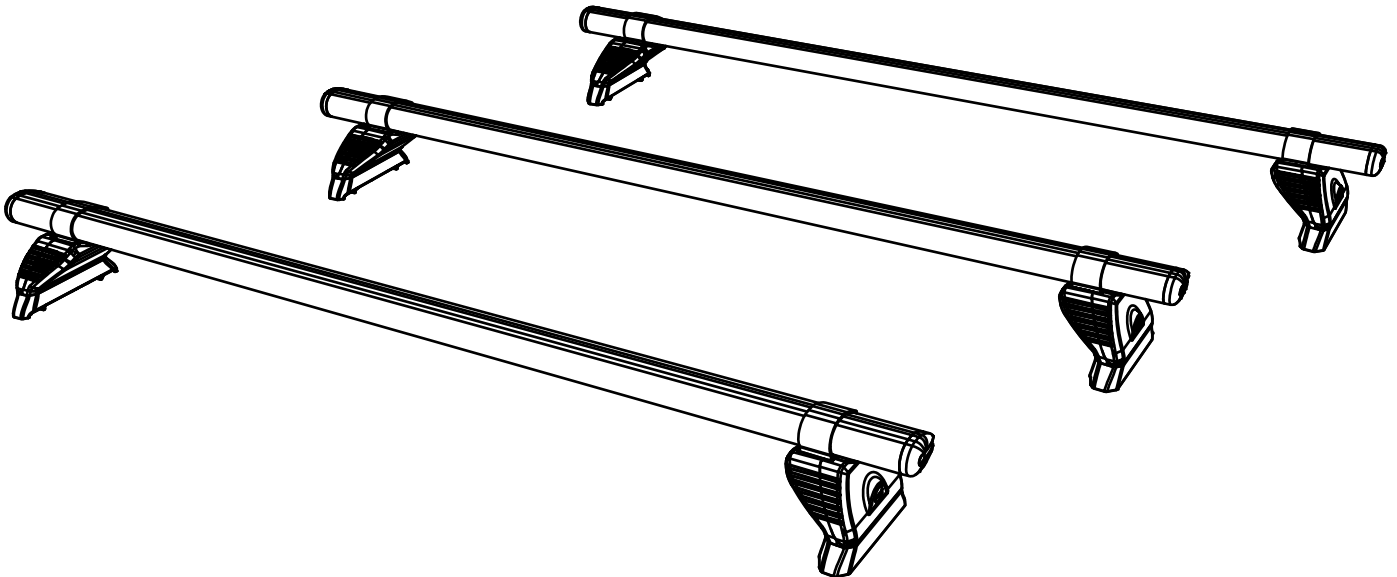
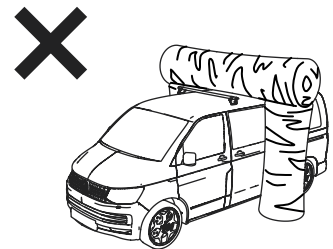


# GB3PR/FL KammBar Instructions

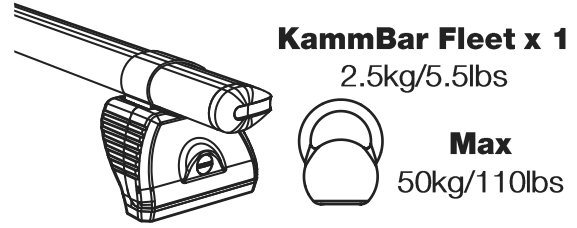


**CITY CRASH** (✓)


According to ISO/ PAS 11154:2006

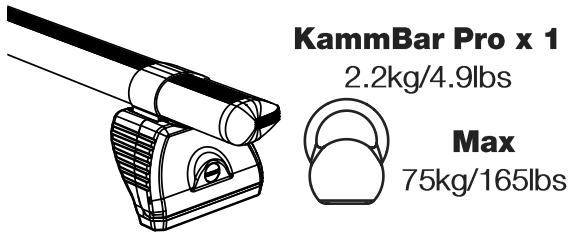


### KammBar Pro

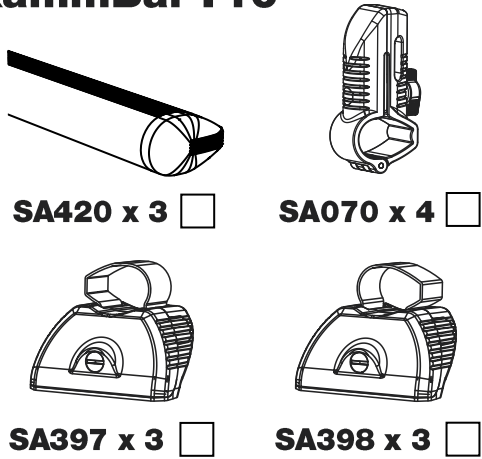


### KammBar Fleet

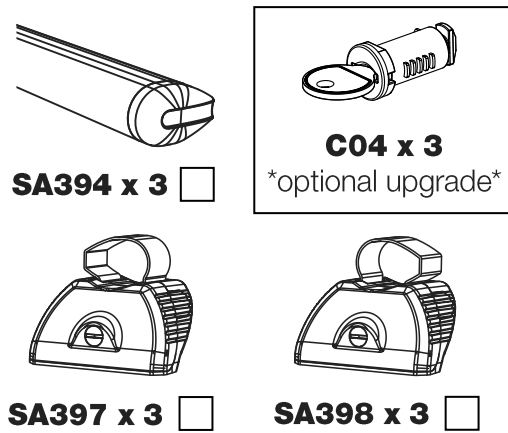

### Fitting Kit

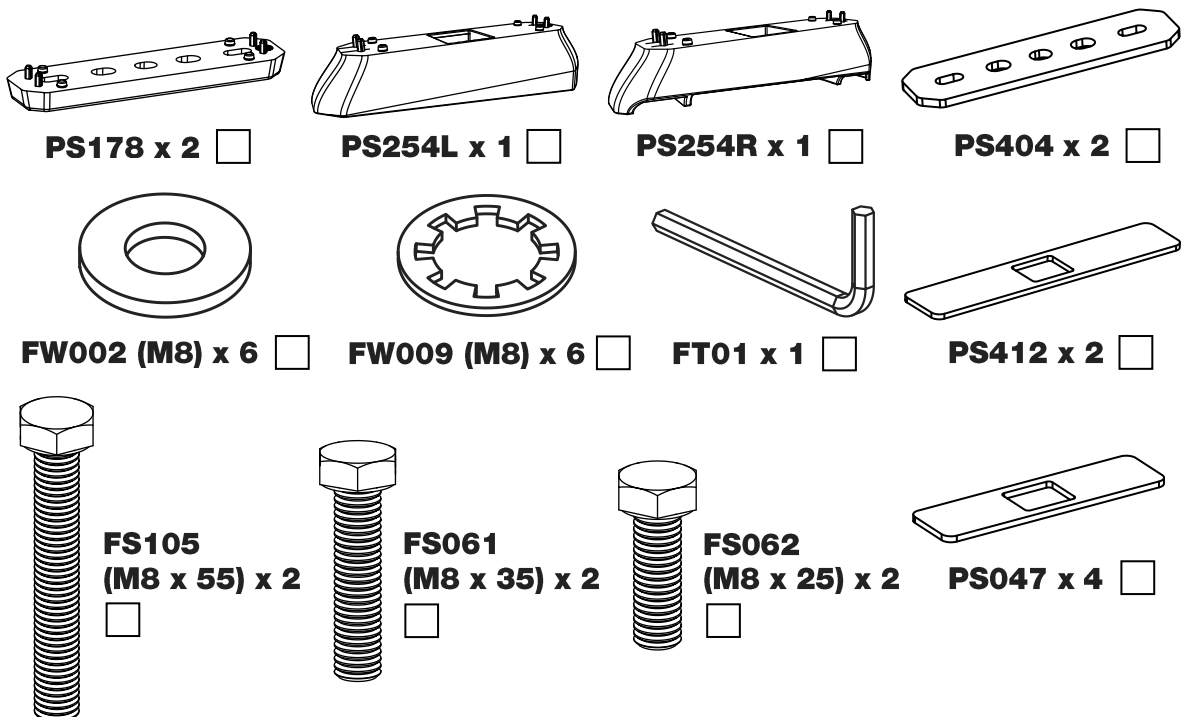


1.

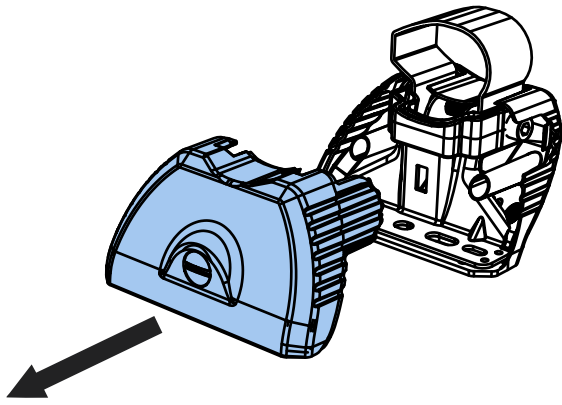

2.



3.




SA397  
PS178




SA397



SA397  
PS254L

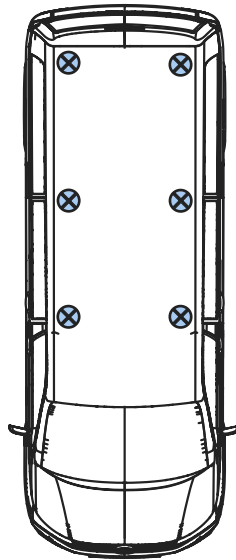


SA398  
PS178




SA398




SA398  
PS254R









4.

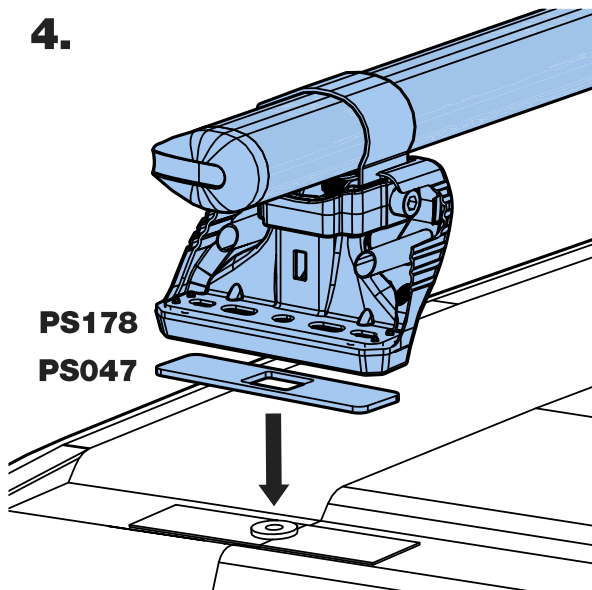


5.

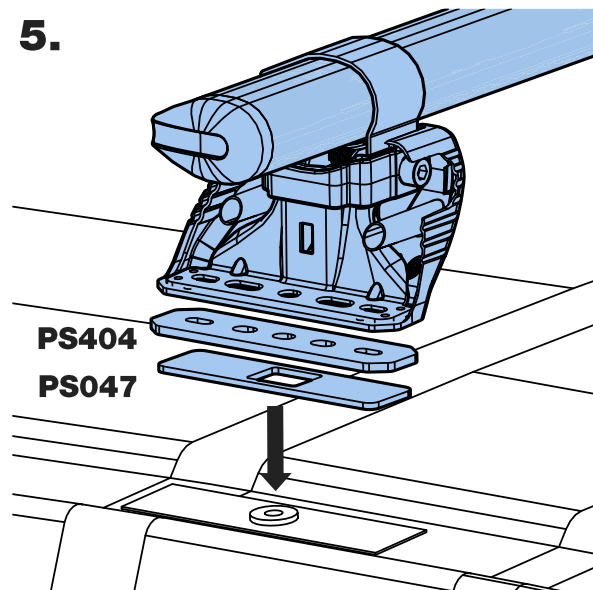


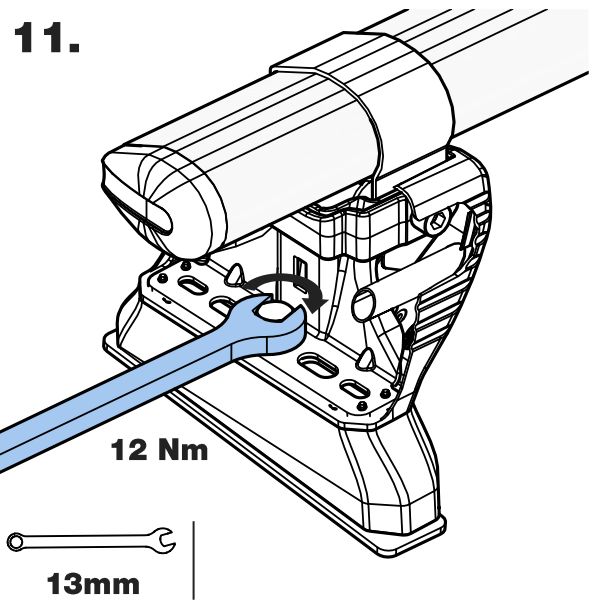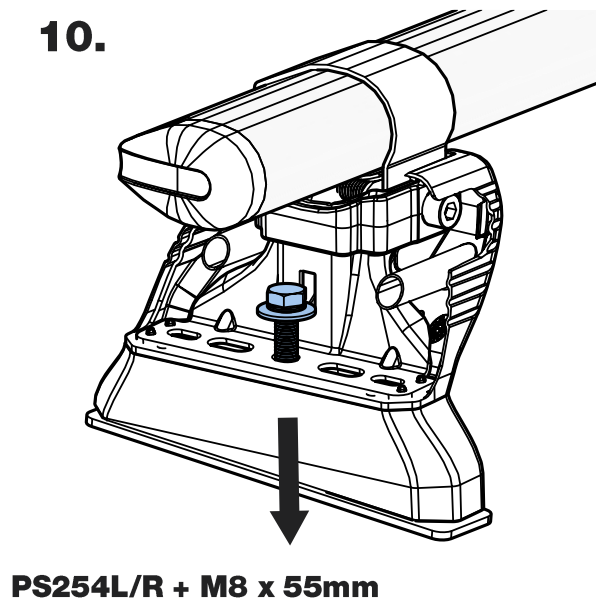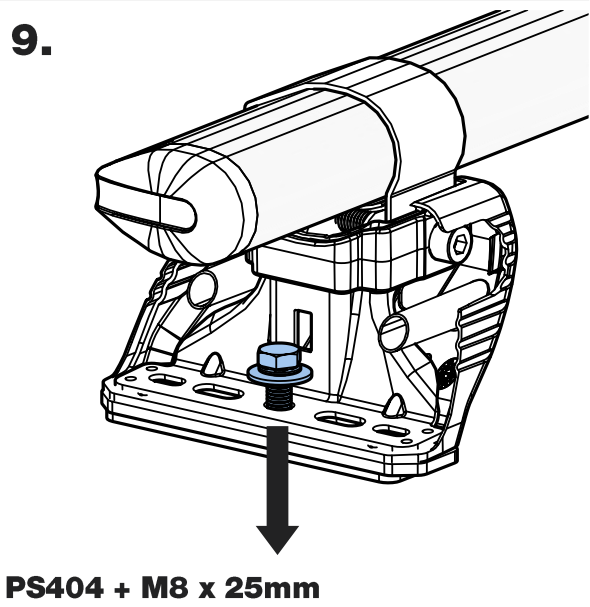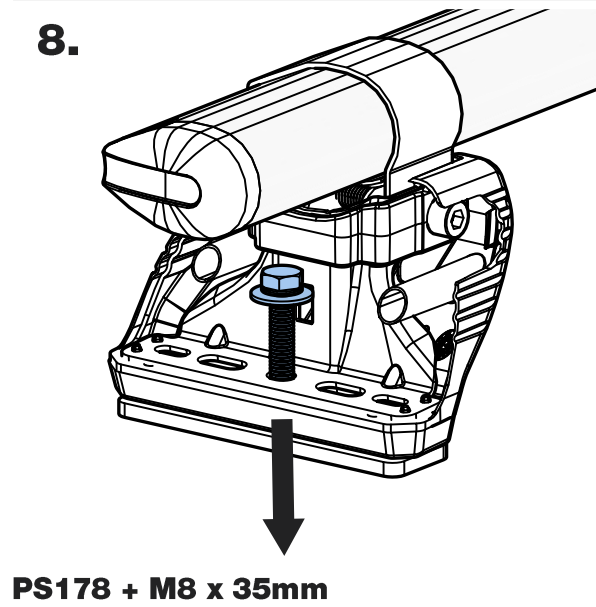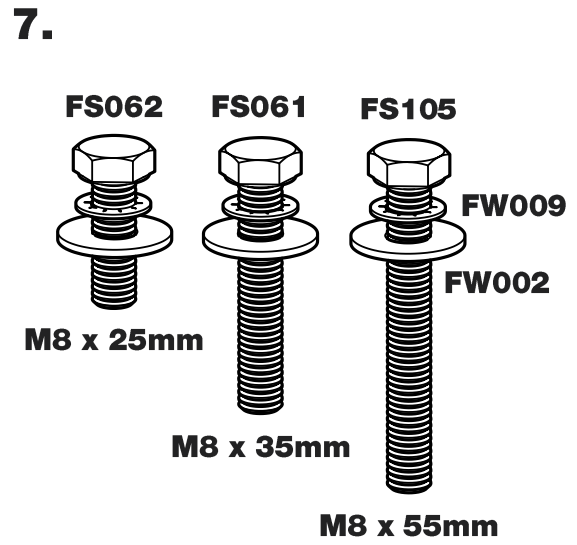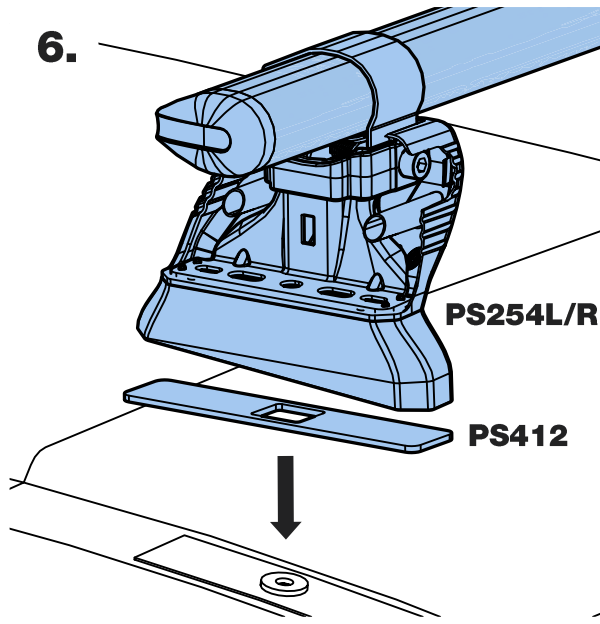


12.

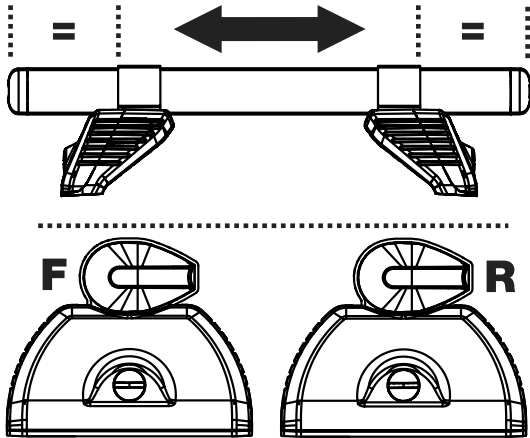

13.

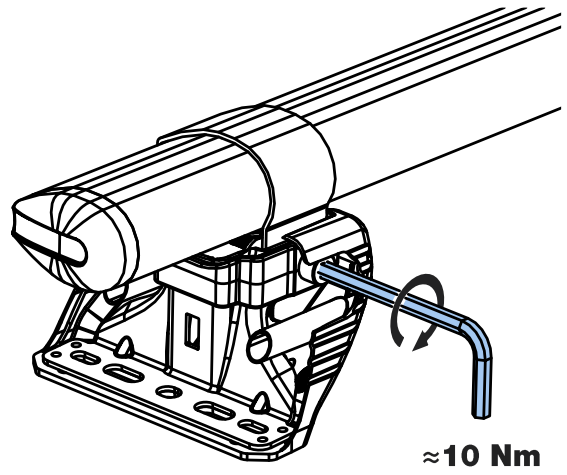

14.

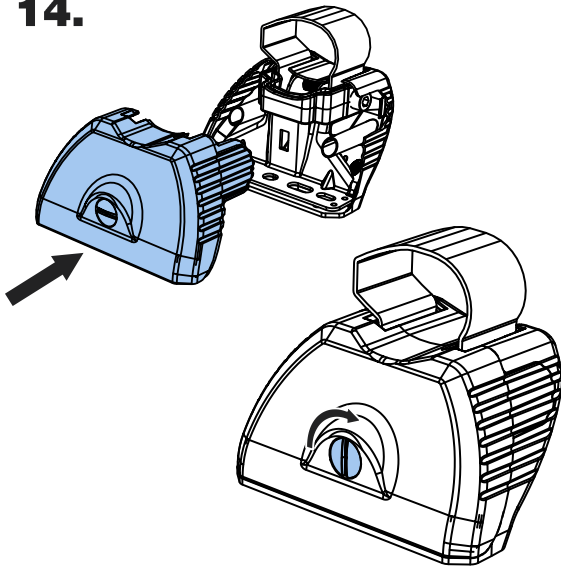

15.

